

### POWER WAVE 16 ADVANCED 16 ZONE SECURITY SYSTEM

- 16 hardwired zones
- Up to 3 partitions and 3 part set modes
- Programmable Day zone (Chime) mode
- 3 exit & up to 16 entry delay timers
- Stay mode night arming station
- Up to 50 users
- Up to 8 programmable time zones
- Auto Arm/Disarm and control of outputs via time zones
- 8 on-board fully programmable outputs
- 256 event buffer
- Multiple communication formats
- Phone line monitoring
- Up to 6 programmable phone numbers and 4 scenarios
- Up to 16 radio devices
- Up to 20 radio keys
- Supports PowerWave & Freewave accessories

### WINWAVE FULL UPLOAD/DOWNLOAD SOFTWARE PACKAGES

- User friendly windows based software for all PowerWave panels
- Bell 103 and CCITT V21 formats supported

#### POWER WAVE 16



#### POWER WAVE 32/64 "ELITE"

### POWER WAVE 32/64 "ELITE" MULTI ZONE CONTROL PANEL

- Up to 64 fully programmable hardwired or wireless zones
- Multi language LCD keypads support
- 8 Programmable outputs with more than 20 programmable options
- 4 true partitions areas with separate arming
- Advanced communication
- 255 event buffer with time and date stamp
- Efficient and easy installation with 4 wire smart Bus to connect keypads and modules
- 100 access codes
- "Quick arm" option
- "STAY" arming for perimeter arming per partition with selectable zones while premises are occupied
- Automatic arming/disarming at a specific time every day per area
- False alarm prevention features

